

SYNERGY 766

MAIN FRAME



Components that are factory assembled provide a reference for model assembly. Disassembly and application of thread lock is required where indicated.

INTRODUCTION

SPECIFICATIONS

FRAME SIDE 1

TRANSMISSION

MAIN BEARING BLOCKS

FRAME SIDE 2

LANDING GEAR

MAIN DRIVE

MOTOR

SERVO INSTALLATION

SWASH PLATE

SWASH PLATE LINKAGES

HEAD ASSEMBLY

PITCH LINKAGES

TORQUE TUBE / BOOM / CONTROL ROD

TAIL AND HUB

BATTERY TRAY

MAIN AND TAIL BLADES

PANEL SYSTEM

OPTIONS AND CONFIGURATIONS



WWW.SYNERGYHELICOPTERS.COM

